

---

# Speedcore Software Integration Flow User Guide (UG062)

*Speedcore eFPGA*

---



## Copyrights, Trademarks and Disclaimers

---

Copyright © 2021 Achronix Semiconductor Corporation. All rights reserved. Achronix, Speedcore, Speedster, and ACE are trademarks of Achronix Semiconductor Corporation in the U.S. and/or other countries All other trademarks are the property of their respective owners. All specifications subject to change without notice.

NOTICE of DISCLAIMER: The information given in this document is believed to be accurate and reliable. However, Achronix Semiconductor Corporation does not give any representations or warranties as to the completeness or accuracy of such information and shall have no liability for the use of the information contained herein. Achronix Semiconductor Corporation reserves the right to make changes to this document and the information contained herein at any time and without notice. All Achronix trademarks, registered trademarks, disclaimers and patents are listed at <http://www.achronix.com/legal>.

### **Achronix Semiconductor Corporation**

2903 Bunker Hill Lane  
Santa Clara, CA 95054  
USA

Website: [www.achronix.com](http://www.achronix.com)  
E-mail : [info@achronix.com](mailto:info@achronix.com)

## Table of Contents

---

<b>Chapter - 1: The eFPGA Paradigm Shift</b> .....	<b>6</b>
User Design RTL Hierarchy .....	6
Defining Engineering Roles .....	7
User Top Module (UTM) .....	8
<b>Chapter - 2: Speedcore Software Tool Flow</b> .....	<b>9</b>
Speedcore Software Flows .....	10
Base Software Flow .....	10
Extended Software Flow .....	10
Benchmarking and Evaluation Flow .....	11
Synthesis .....	12
Place and Route .....	12
Timing Analysis and Reporting .....	13
Simulation .....	13
Full-Chip Simulation .....	13
<b>Chapter - 3: Speedcore Boundary Pin Insertion and Placement</b> .....	<b>15</b>
ACE Auto-insertion .....	15
Explicit Instantiation .....	15
Explicit Instantiation via the create_boundary_pins TCL Command .....	16
Boundary Pin Insertion via PDC Commands .....	16
Example PDC for Boundary Pin insertion .....	17
Modelling Boundary Pins and I/O Ring Constants .....	17
End User Design Constant Driven From I/O Ring .....	17
End User Design Constant Driven From Speedcore .....	18
<b>Chapter - 4: Speedcore ASIC-UTM Timing Integration</b> .....	<b>19</b>
I/O Ring Timing Constraints .....	19
<b>Chapter - 5: ACE Software Extensions for Speedcore IP</b> .....	<b>21</b>
Extending ACE .....	21
Configuration File .....	22
Plugging in IP Generator Tools .....	24
IP Generator .....	24

Plugging in an IP Generator .....	25
How ACE Calls the IP Generator .....	26
IP Generator Input .....	28
IP Generator Outputs .....	29
Plugging into Reports and Bitstream Generation .....	30
Timing Report Integration .....	30
Power Report Integration .....	31
Utilization Report Integration .....	33
Bitstream Generation Integration .....	34
Plugging in External Tools .....	38
Extending ACE to Run an External Tool .....	38
Extending ACE GUI Menus .....	38
Extending ACE GUI Toolbars .....	43
JTAG Browser Support for Speedcore .....	47
JTAG Browser XML Format .....	48
Example JTAG Browser XML .....	49
Customized JTAG Browser XML File .....	53
Revision History .....	78

## Protected Document

The full contents of this document are confidential and require a signed non-disclosure agreement (NDA) between Achronix and your company. Talk with your [Achronix sales representative](#) about obtaining an NDA.

Gaining access to Achronix confidential design documents requires the following steps:

1. Ensure that your company/organization has an active NDA with Achronix.
2. Log into your [Achronix support portal](#) account. If you do not yet have a support portal account, please refer to "[How Do I Register for an Achronix Support Account](#)" to register and set up your account.
3. When logged in, click the link "Submit a request" located next to your user name.
4. Select **Document Request** under Submit a request.

## Submit a request

Please choose your issue below

-
General Support Issue
ACE License Request
<b>Document Request</b>
Synplify Pro License Refresh Request

5. When the ticket form is selected, a number of ticket fields are revealed. Enter a description of the document(s) you are wanting to access, and click **Submit** when complete.
6. A support engineer will review your request and, if approved, will grant you access to the documents/files.

### Note

The fields, Subject and Description are not meaningful for the process, but are nevertheless required to submit the ticket.